UK

Product information

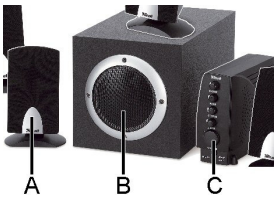

Overview

A: Satellite speaker
B: Low tone (Subwoofer) speaker
C: Control unit

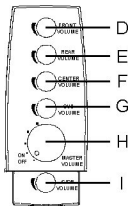

Control unit

D: Front volume control
E: Rear volume control
F: Centre volume control
G: Subwoofer volume control
H: Master volume control
LED
I: Side volume control

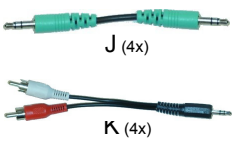

Cables

J: Audio cable (PC → Control unit)
K: Audio cable (DVD → Control unit)

Installation

1

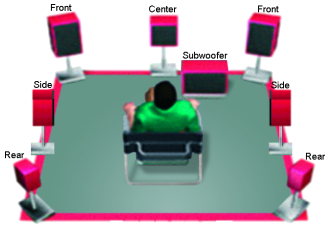

Position of the speakers.

Connect as shown in the diagram.

2

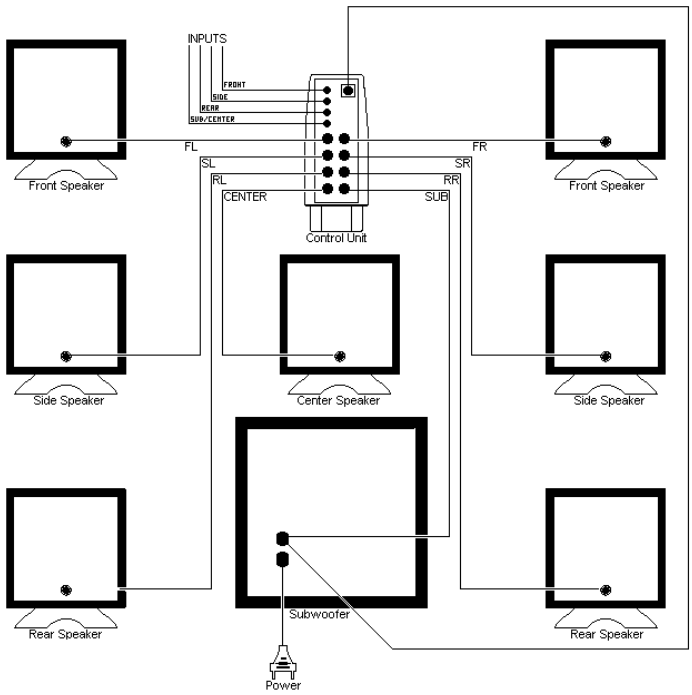

UK

3

Turn on the control unit (H). Use the On/Off switch at the back of the device. The LED will be lit blue.

⚠ Reduce the volume (Front, Rear, Centre, Subwoofer and Side).

Turn on the sound source (PC, DVD, ...) and play the sound (music, video).

Adjust the volume (Front, Rear, Centre, Subwoofer and Side).

The speaker set supports: Dolby Surround EX, Dolby Digital Surround EX, Dolby Digital, Dolby Stereo, Dolby Prologic II, DTS-ES, DTS and Direct X.
The sound source must also support one of these standards. See the instruction manual provided with the sound source.

Note:

⚠ Stereo sound source: only connect “Front L/R”.
5.1 sound source: only connect “Front L/R”, “Rear” and “Sub/Cent”.
Sound will be automatically converted to 7.1 sound.

⚠ Sound only from Front speakers: sound source → stereo, e.g. portable CD player, all the inputs connected. Only connect “Front L/R”.

⚠ No sound:
- LED (H) is not lit: check the power supply and the connections.
- Volume is too low: adjust the volume using the control unit or check the volume of the sound source.

Go to www.trust.com/14192 for up-to-date FAQs and instruction manuals.

Safety instructions

- Disconnect the power plug from the mains supply before cleaning the device. Do not use a liquid cleaning product or a spray to clean the device. Clean the device with a dry cloth.
- Do not use this device near water or other liquids.
- Do not use this device in a damp area, such as a bathroom, damp basement or a swimming pool.
- Make sure nothing is placed on the cable. Do not use this device where the cable can become worn or damaged as a result of people walking over it.
- Under the following circumstances, remove the plug from the wall socket and have the device repaired by qualified personnel:
  - The cable or plug is damaged.
  - The device has been dropped or the casing is damaged.
  - The device does not work correctly.

CE

- This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/14192/ce.

Warranty & copyright

- This device has a two-year product warranty which is valid from the date of purchase. Go to www.trust.com/warranty for more information.
- It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.